


9. Using on Mac PC

Installation on Mac® computer

<Installation USB Driver>

1. When plug your modem in, you will see as below.

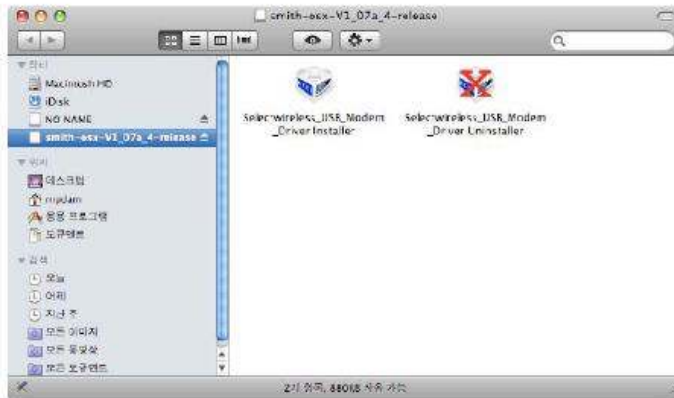

2. Click icon of "Driver_installer", then click button of "Install" as below.



3. After finished installation automatically, your computer will be reboot to finish to installation.

<Connecting to Internet>

1. Click on "System Preferences" then you will see as below.



2. In Network, click button of "+" on left-lower side as below for adding your modem.




3. In Interface, you must select "Qualcomm CDMA..." and then input your service name in Service Name.



4. Input telephone number of your network in Telephone Number and input ID in Account Name (These are provided from your Network Provider).



5. In button of "Advanced", click "OK" after select "other" in Vendor and "Selectwireless USB modem" in Model.

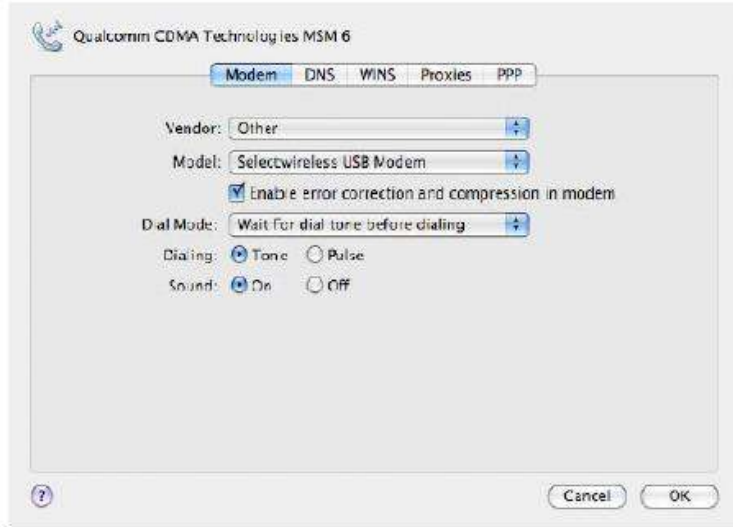

6. To connect to Internet, click button of "Connect".

